

TOC LR M. TT

M380

5 - 80 mg/L TOCb)

H<sub>2</sub>SO<sub>4</sub> / Persulphate / Indicator

## Instrument specific information

The test can be performed on the following devices. In addition, the required cuvette and the absorption range of the photometer are indicated.

Instrument Type	Cuvette	λ	Measuring Range
MD 600, MD 610, MD 640, XD 7000, XD 7500	ø 16 mm	610 nm	5 - 80 mg/L TOC <sup>b)</sup>
SpectroDirect	ø 16 mm	596 nm	5 - 80 mg/L TOC <sup>b)</sup>

#### Material

Required material (partly optional):

Reagents	Packaging Unit	Part Number
TOC Spectroquant 1.14878.0001 tube test d)	25 pc.	420761

The following accessories are required.

Accessories	Packaging Unit	Part Number
Thermoreactor RD 125	1 pc.	2418940
Screw caps TOC	1 Set	420757

## **Application List**

- · Drinking Water Treatment
- · Waste Water Treatment
- · Raw Water Treatment

# Preparation

 Before performing the test, you must read through the original instructions and safety advice that is delivered with the test kit (MSDS are available on the homepage of www.merckmillipore.com).



#### **Notes**

- 1. This method is adapted from MERCK.
- 2. Spectroquant® is a registered trademark of the company MERCK KGaA.
- 3. Appropriate safety precautions and good laboratory technique should be used during the whole procedure.
- 4. Sample volume should always be metered by using a volumetric pipette (class A).
- 5. TOC = Total Organic Carbon
- 6. Aluminium caps can be reused (see Merck).
- 7. Due to the greater height of the cuvettes, the lid of the measuring chamber cannot be completely closed on XD devices. This does not affect the measurement.




### Determination of TOC LR with MERCK Spectroquant® Cell Test, No. 1.14878.0001

Select the method on the device.


For this method, a ZERO measurement does not have to be carried out every time on the following devices: XD 7000, XD 7500

Skip steps with Blank.


- Use two clean suitable glass vessels. Mark one glass vessel for zeroing.
- Put 25 mL deionised water in the zero sample.
- 2. Put 25 mL sample in the sample vessel.
- Add 3 drops of reagent TOC-1K and mix.
- 4. The pH value of the sample should be under 2.5. If necessary, add sulphuric acid.
- Stir for 10 minutes at a medium speed. (Magnetic stirrer, stirring stick) 5.

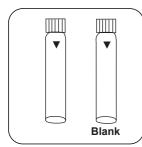


Prepare two reaction vials. Place 3 mL of prepared Mark one as a blank.

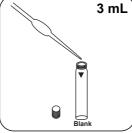

zero sample in the blank.

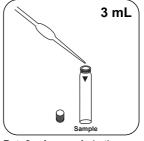

Put 3 mL sample in the sample vial.

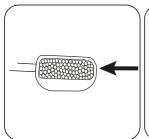

Add exactly one level microspoon TOC-2K.




Close the vial(s) immediately with the aluminium caps




Warm vial for 120 minutes at 120 °C in a pre-heated thermoreactor in inverted position



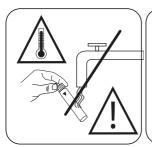

Allow vial to stand inverted for 1 hour and to cool. **Do not cool it with water!** After cooling down, rotate it and measure in the photometer **within 10 min** 

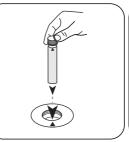

Place **blank** in the sample chamber. • Pay attention to the positioning.


Zero

Press the **ZERO** button.

.



Remove **vial** from the sample chamber.

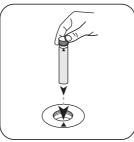

Place **sample vial** in the sample chamber. • Pay attention to the positioning.

**Test** 

Press the **TEST** (XD: **START**)button.

The result in mg/L TOC appears on the display.



### **Chemical Method**

H<sub>2</sub>SO<sub>4</sub> / Persulphate / Indicator

## **Appendix**

## Calibration function for 3rd-party photometers

Conc. = a + b•Abs + c•Abs<sup>2</sup> + d•Abs<sup>3</sup> + e•Abs<sup>4</sup> + f•Abs<sup>5</sup>

	ø 16 mm
a	9.84368 • 10+1
b	-3.32135 • 10 <sup>+1</sup>
С	-2.14517 • 10 <sup>+1</sup>
d	
е	
f	

#### **Derived from**

EN 1484:1997

Standard Method 5310 C

b) Reactor is necessary for COD (150 °C), TOC (120 °C) and total -chromium, - phosphate, -nitrogen, (100 °C) | d) Spectroquant® is a Merck KGaA Trademark