



Lead (A) TT

234

0.1 - 5 mg/l Pb

4-(2-Pyridylazo)-resorcine

## Instrument specific information

The test can be performed on the following devices. In addition, the required cuvette and the absorption range of the photometer are indicated.

Instrument Type	Cuvette	$\lambda$	Measuring Range
SpectroDirect, XD 7000, XD 7500	ø 16 mm	515 nm	0.1 - 5 mg/l Pb

## Material

Required material (partly optional):

Reagents	Packaging Unit	Part Number
Lead Spectroquant 1.14833.0001 tube test <sup>d)</sup>	25 pc.	420754

## Application List

- Waste Water Treatment
- Galvanization

## Preparation

1. Before performing the test, you must read through the original instructions and safety advice that is delivered with the test kit (MSDS are available on the homepage of [www.merckmillipore.com](http://www.merckmillipore.com)).
2. With the test process described, only Pb<sup>2+</sup> ions are determined. To determine colloidal, undissolved and complex-bound lead, digestion is first required.
3. The pH value of the sample must be between 3 and 6.

## Notes

1. This method is adapted from MERCK.
2. Spectroquant<sup>®</sup> is a registered trademark of the company MERCK KGaA.
3. Appropriate safety precautions and good laboratory technique should be used during the whole procedure.

4. Sample volume should always be metered by using a 5ml volumetric pipette (class A).
5. Because the reaction depends on temperature, the sample temperature must be between 10 °C and 40 °C.
6. The reagents are to be stored in closed containers at a temperature of +15 °C – +25 °C.

## Implementation of the provision Lead (Pb<sup>2+</sup>) in soft to medium-hard water


Select the method on the device

For this method, no ZERO measurements are to be carried out with the following devices: XD 7000, XD 7500


Skip steps with Blank.

### Method A

Use Method A for the determination of lead in soft to medium-hard water containing Ca<sup>2+</sup> particles below 70 mg/l (approx. 10 °dH).

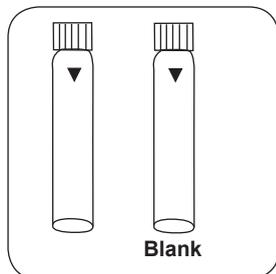




Blank

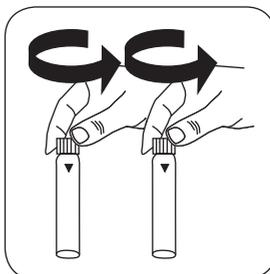

Prepare two reaction vials. Mark one as a blank.

**Note! Reagent tubes contain Potassium cyanide! Adhere strictly to the specified dosage sequence!**


Open two reaction vials .

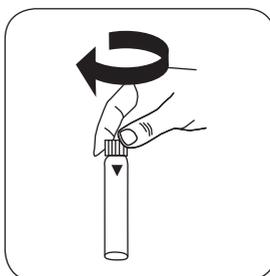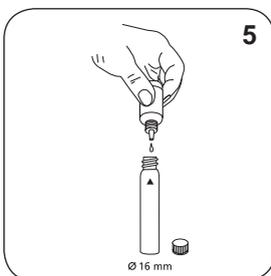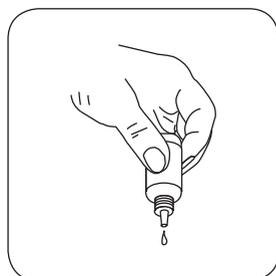


Hold cuvettes vertically and add equal drops by pressing slowly.

Add **5 drops Reagenz Pb-1K solution** to each vial.


Close vial(s).

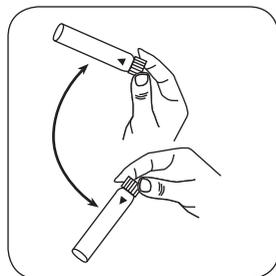


Invert several times to mix the contents.

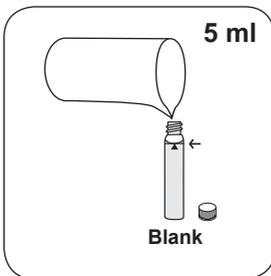


Put **5 ml deionised water** in the blank.

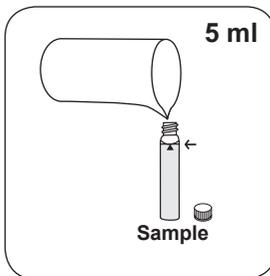


Put **5 ml sample** in the sample vial.

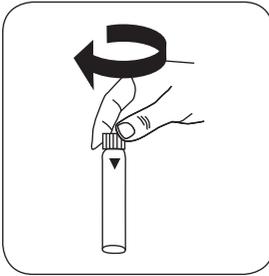


Close vial(s).

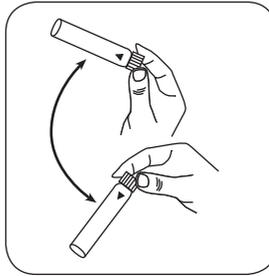


Invert several times to mix the contents.

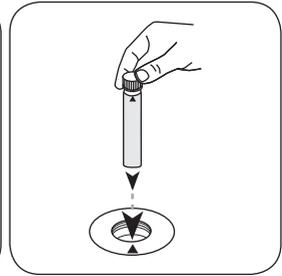


Place **blank** in the sample chamber. • Pay attention to the positioning.

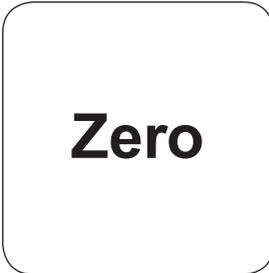


Press the **ZERO** button.

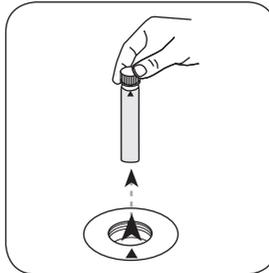

Remove **vial** from the sample chamber.

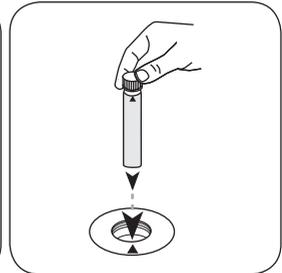

Place **sample vial** in the sample chamber. • Pay attention to the positioning.

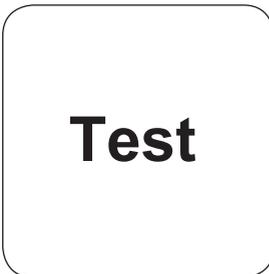

Press the **TEST** (XD: **START**) button.

The result in mg/l Lead, in soft to medium hard waters (procedure A) appears on the display.

## Chemical Method

4-(2-Pyridylazo-)-resorcine

## Appendix

### Interferences

Interference	from / [mg/l]
Ag	100
Al	1000
Ca	70
Cd <sup>2+</sup>	100
Cr <sup>3+</sup>	10
Cr <sub>2</sub> O <sub>7</sub> <sup>2-</sup>	50
Cu <sup>2+</sup>	100
F <sup>-</sup>	1000
Fe <sup>3+</sup>	2
Hg <sup>2+</sup>	50
Mg	100
Mn <sup>2+</sup>	0,1
NH <sub>4</sub> <sup>+</sup>	1000
Ni <sup>2+</sup>	100
NO <sub>2</sub> <sup>-</sup>	100
PO <sub>4</sub> <sup>3-</sup>	1000
Zn	100
EDTA	0,1
Surfactants	1000
Na-Ac	0,2
NaNO <sub>3</sub>	0.4
Na <sub>2</sub> SO <sub>4</sub>	0.02

### Bibliography

Shvoeva, O.P., Dedkova, V.P. & Savvin, S.B. Journal of Analytical Chemistry (2001) 56: 1080

<sup>a)</sup> determination of free, combined and total | <sup>b)</sup> Reactor is necessary for COD (150 °C), TOC (120 °C) and total -chromium, - phosphate, -nitrogen, (100 °C) | <sup>c)</sup> MultiDirect: Adapter is necessary for Vacu-vials® (Order code 19 20 75) | <sup>d)</sup> Spectroquant® is a Merck KGaA Trademark | <sup>e)</sup> alternative reagent, used instead of DPD No.1/No.3 in case of turbidity in the water sample caused by high concentration of calcium and/or high conductivity | <sup>f)</sup> additionally required for determination of bromine, chlorine dioxide and ozone in the presence of chlorine | <sup>g)</sup> Reagent recovers most insoluble iron oxides without digestion | <sup>h)</sup> additionally required for samples with hardness values above 300 mg/l CaCO<sub>3</sub> | <sup>i)</sup> high range by dilution | <sup>j)</sup> including stirring rod, 10 cm

